


T70

User Manual

V 1.0

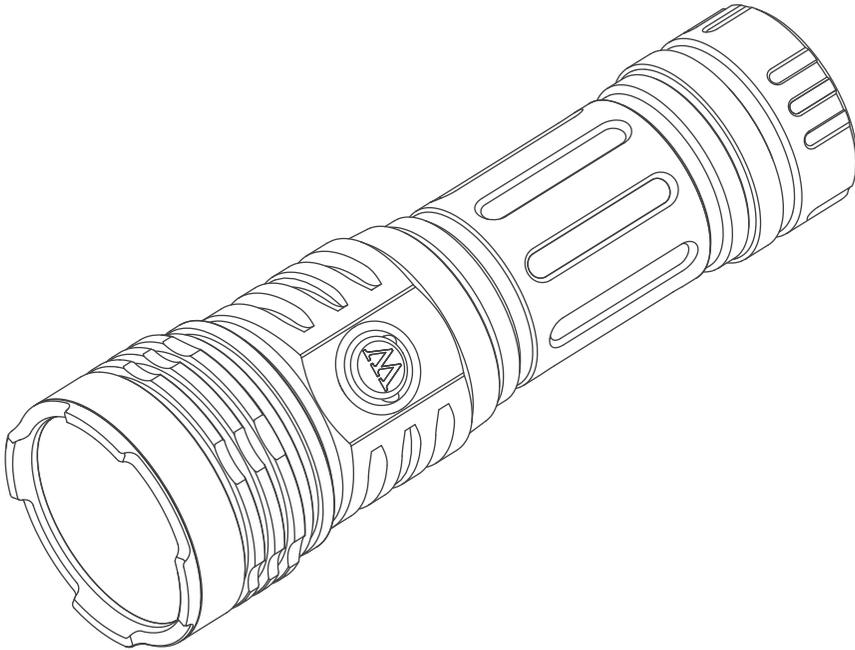


WUBEN[®]
SINCE 1981

WARNINGS


- Please read user manual carefully before using the light.
- Product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes.
- Please keep the light away from children.
- Please use WUBEN or WUBEN recommended battery.
- Please don't disassemble the light or it will not be covered by WUBEN warranty policy.

Product List


Before using this product, please check whether the contents of the package are complete.

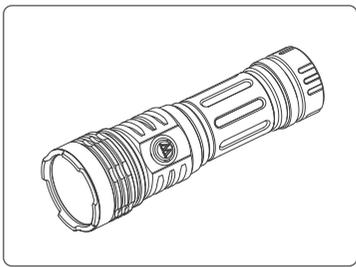


T70 x 1 (With Battery)

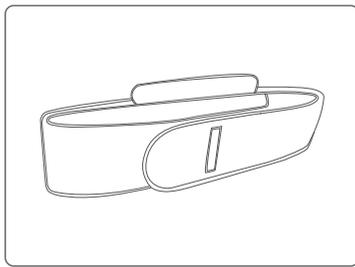


Holster x 1

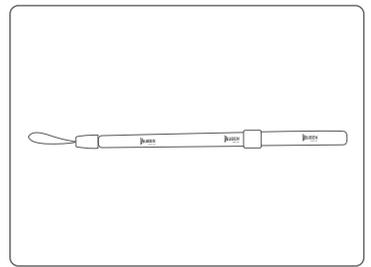

Hand Strap x 1

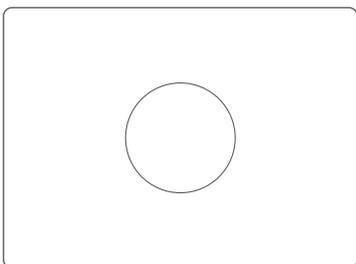

Waterproof Ring x 2

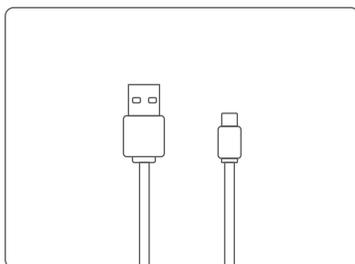

TYPE-C Charging Cable x 1




(Manual/Warranty Card /Certificate) x 1

Product Features


WUBEN T70 is a high performance flashlight specially designed for outdoor and camping activities. Utilized Cree XHP70.2 LED, and powered by 26650 Li-ion battery of 5000mAh, T70 emits as high as 4200 Lumens, matched with Type-C recharging function, more convenient to use.

Product Operation


1. Product Structure

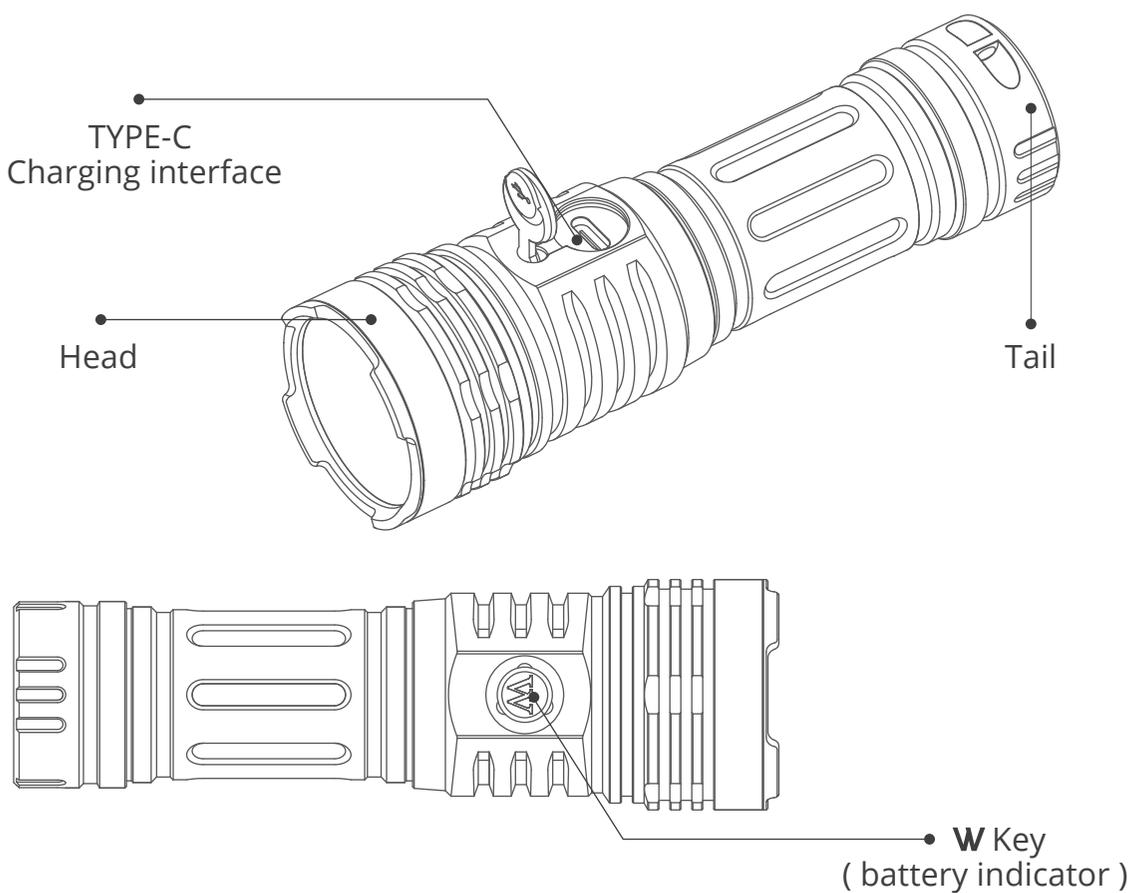

2. Installation

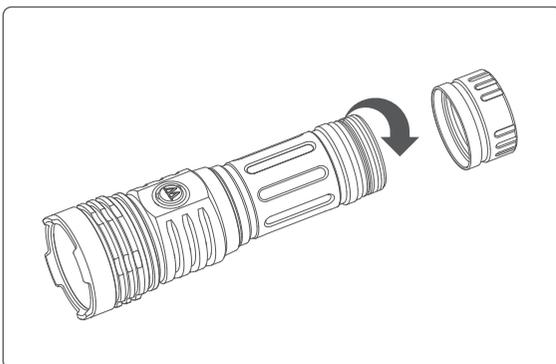

① Screw out the tail cap

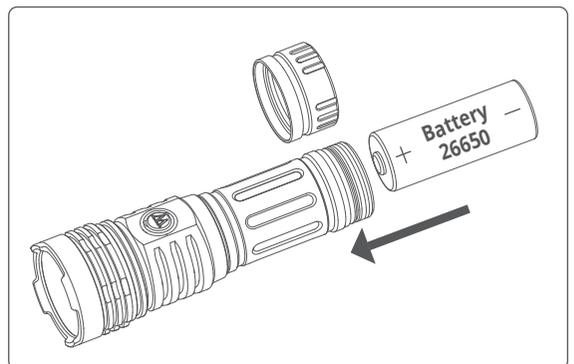

② Load battery as instructed

3. Operation

- ① **Turn on:** Single click to turn on the light.
- ② **Default outputs selection:** When the light is on, single click to cycle through Low-Med-High-Turbo. Press and hold 2s to turn off the light.
- ③ **Continuous outputs selection:** When the light is on, triple click to get into continuous outputs selection, start from low to turbo and then turbo to low, release to select the current output, triple click again to switch into default outputs selection mode.
- ④ **Flashing mode:** When the light is NOT on continuous output brightness selection mode, double click to switch between Strobe and SOS, then single click to exit the flash mode
- ⑤ **Instant turbo:** Press and hold to activate turbo output, then single click to turn off.

4. Lock out function

When the light is off, light blinks 3 times to indicate lockout status. Then any operations on the switch will activate the blue light in switch to indicate lockout status, except triple click on the switch to unlock it.

5. Charging

- ① Please make sure the flashlight is off.
- ② Please use 5V/2A equipment for charging.
- ③ Please insert Type-C charging cable.
- ④ Once charging is completed, please remove the charge cable. Charging warning:

Power 100%~90%	Blue light constant
Power 90%~41%	Blue light flashes
Power 40%~16%	Red light
Power under 15%	Red light flashes

- ⑤ Indicator is in the Switch.
- ⑥ It takes about 4 hours to fully charged the light.
- ⑦ When blue light is constant on, it means fully charged, please pull out the charging cable right after that.

Low power warning :

Power 100%~80%	Blue light constant (Turns off after 5 seconds)
Power 79%~30%	Blue light flashes (Turns off after 5 seconds)
Power 29%~15%	Red light
Power under 15%	Red light flashes

Parameters

FL1 Standard	Turbo	High	Med	Low	Storbo	SOS
	4200 LM	1300 LM	400 LM	40 LM	4200 LM	100 LM
	2h	3.5h	7.5h	35h	/	/
	250m			1m		
	15750 cd			IP68		
Size	139.7mm x 42mm (L x D)					

 The above data tested in WUBEN laboratory, may change because of different test instruments or other factors.

Accessories recommendation

Recommended accessories: Holster, 26650 battery, extended tube.

Maintenance

- O-ring may lose fail to keep the light water proof, please change O-ring according to the condition to promise waterproof performance.
- Please use WUBEN or WUBEN recommended battery.
- When the battery in low status, please recharge the light or change battery in time to maintain the lifespan of the battery.

- Please clean the conductive part with alcohol dipped cloth.
- Take out the battery if put away for a long time, in case of battery leakage or possible explosion.

FAQs

Problem	Reason	Solution
Abnormal flashing or no bright	Check whether the switch is opened properly	Open the switch
	Checked whether the assembly is in the right place	Tighten the assembly parts
	Check whether the battery is charged	Charger the battery
	Check whether the battery is anti-loading	Remove the battery re-assembly
	Check if the battery contact points are dirty	Use alcohol to clean
Noise	Check whether there is a foreign body fall	Pour foreign body
	Parts damage	Return to the local dealer

If the above method has not solved your problem. Please contact local dealers for after-sales service.

Warranty policy

1. Under Warranty

- 15 days free replacement: Since the purchase date, consumer can request to replace with same or similar product for free due to quality problem within 15 days.
- 1 year free repair service: Since the purchase date, WUBEN offers free repair service due to quality problem within 1 year.
- 5 years free repair service for registered users: Since the purchase date, for registered users, WUBEN offers free repair service due to quality problem within 5 years.

- Life time repair service: Over 5 years since the purchase date,WUBEN offers repair service due to quality problem but may charge some cost according to the cost may cause.
- Negotiation is opened to any possible argument.

2.Beyond Warranty

- Breakdown due to deliberate damage.
- Breakdown due to improper operation.
- Breakdown due to battery leakage.
- Abrasion due to normal use.
- Breakdown due to irresistible reasons.
- Gift.

Final interpretation is reserved to WUBEN.

SHENZHEN SHENGQI LIGHTING TECHNOLOGY., LTD

E-mail: md@wubenlight.com Web: www.wubenlight.com

Add: 209# Building C, 1970 Industrial Zone, Minzhi, Longhua District, Shenzhen, China

Zip Code: 518131



wubenlight.com